


1° Join the short side rails (500 mm) in the legs of the culture table, next, join only a long side rails (750 mm). It is important not to squeeze the nuts completely till the culture table is put together (before putting the substrate).

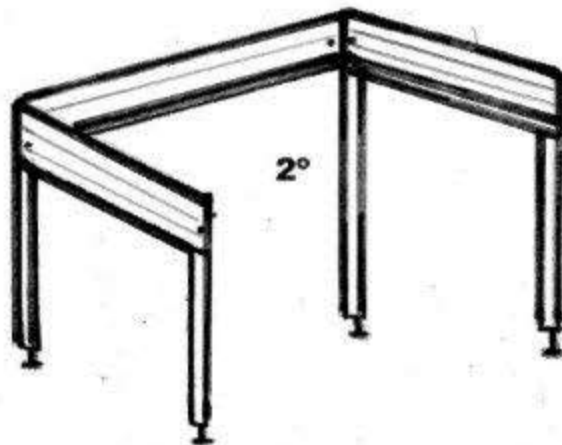

2° Put the base of the culture table. Then, put the long side pitch doing a "small gesture" (750 mm). If you don't do it like that, you won't be able to put the base of the culture table because the height screws of the culture table would block you.

3° Put red tops in the three holes of the base of the culture table. For putting in place the bamboo canes replace the red tops with the grey cables, and next put the 3 bamboo canes.

4° Put the nivellers in the legs of the culture table, or the wheels if it were to be the case.

WARNING: Don't put soil in the culture table, the sustratum has to be 100% organic origin.

For more information in this article and the complements of it click on: www.cultivaencasa.com

